

## Safety setting




---

The password is required if you want to change the safety parameters. Please get the correct password from the service engineer. Enter the correct password and "↵" to enter the safety setting page.



To change the password, press the "▲" or "▼" button to select the "Settings" item of the main menu, and press the "↵" button to confirm.

Then enter the sub-menu of "settings" and select the "safety setting" item and confirm. The password page is now displayed.


Press the "▲" or "▼" button to modify the password digit, press the "↵" button to change the next digit.

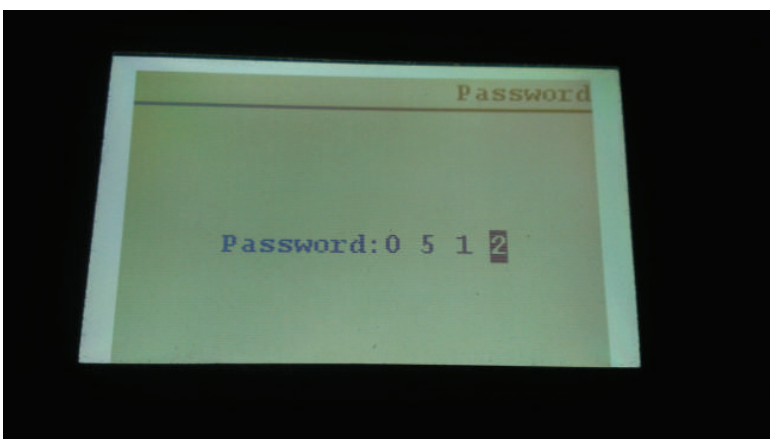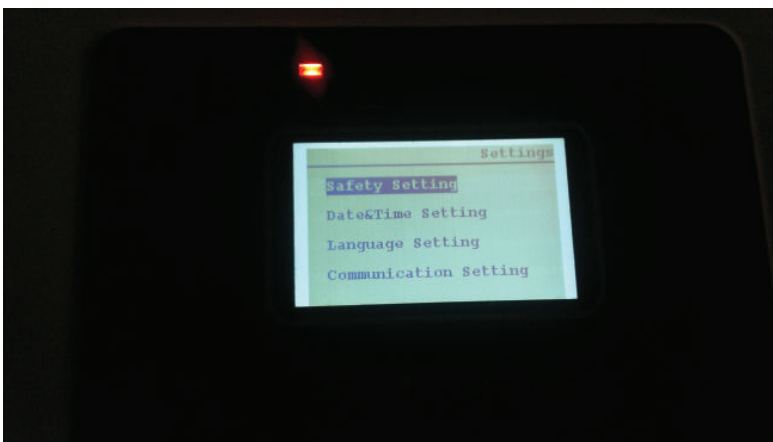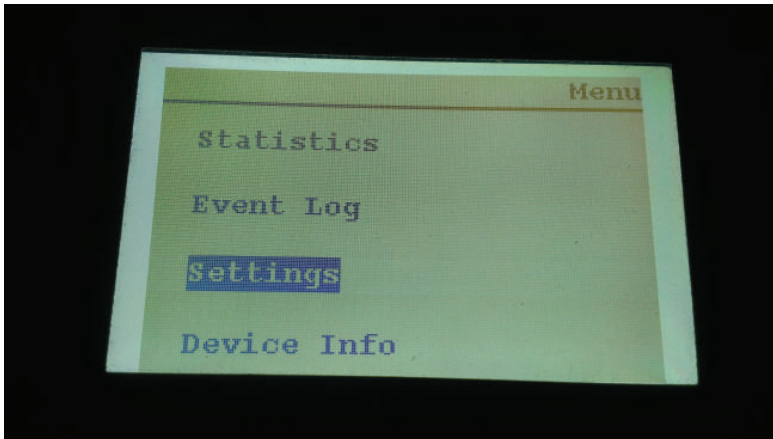

To modify parameters, use the "▲" or "▼" button to modify the selected parameter and confirm with the "↵" button. Then the next parameter will be selected. Press the "ESC" button to cancel.

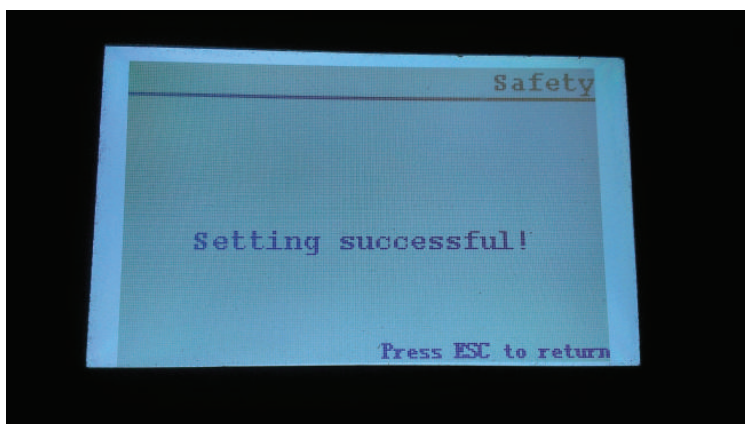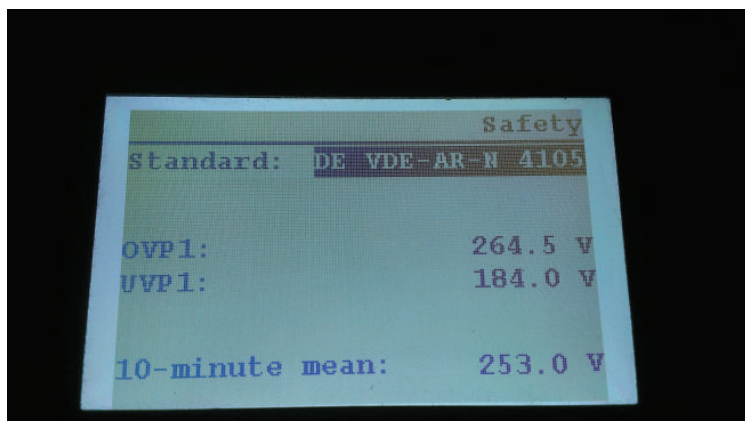

There are two pages of safety parameters. After modifying the last parameter of the first page, press "↵" to switch to the second page.

	<p><b>NOTICE!</b></p> <p>The safety of the grid may be influenced due to wrong safety settings!</p> <ul style="list-style-type: none"><li>• The default parameters settings comply with the local regulations.</li><li>• Don't change the values of the monitored operational limits unless the utility provider agrees!</li></ul>
---	--